Driver's Door Mirror Vibrates

(Supersedes 00-035, dated April 18, 2000)

SYMPTOM

The driver's door mirror vibrates while driving on smooth roads.

PROBABLE CAUSE

The mirror is not properly attached to the mirror holder, allowing the glass to vibrate when the vehicle is in motion.

CORRECTIVE ACTION

Replace the driver's mirror.

VEHICLES AFFECTED

1999 Accord - All

2000 Accord 2-door

V6 From VIN 1HGCG2...YA000001 thru 1HGCG2...YA023564

L4 From VIN 1HGCG3...YA000001 thru 1HGCG3...YA013755

2000 Accord 4-door

V6 From VIN 1HGCG1...YA000001 thru 1HGCG1...YA100449

L4 From VIN 1HGCG5...YA000001 thru 1HGCG5...YA150402

L4 From VIN 1HCGC6...YA000001 thru 1HGCG6...YA154026

L4 From VIN 3HGCG6...YG700001 thru 3HGCG6...YG707505

PARTS INFORMATION

Left Mirror, 2-door: P/N 76253-S84-K21, H/C 5617287

Left Mirror, 4-door: P/N 76253-S84-A31, H/C 6063820

WARRANTY CLAIM INFORMATION

In warranty: The normal warranty applies.

Operation Number:	818101
Flat Rate Time:	0.3 hour
Failed Part:	P/N 76250-S82-K21ZA H/C 5683362
Defect Code:	045
Contention Code:	B99
Skill Level:	Repair Technician

Out of warranty: Any repair performed after warranty expiration may be eligible for goodwill consideration by the District Service Manager or your Zone Office. You must request consideration, and get a decision, before starting work.

REPAIR PROCEDURE

1. Pry out the bottom of the mirror with a screwdriver wrapped in a shop towel. Continue to pry until the actuator shafts come out of the actuator or the mirror.

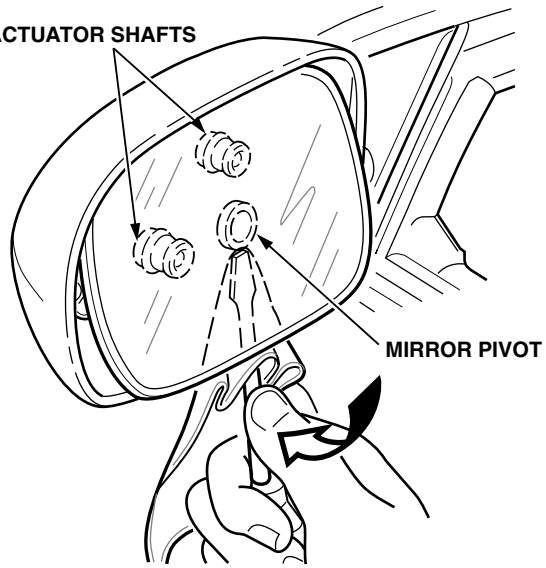

© 2000 American Honda Motor Co., Inc. – All Rights Reserved

Skill Level R REPAIR

CUSTOMER INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

2. If the actuator shafts are still attached to the mirror, remove them and reinstall them on the actuator. Make sure the rubber boots are properly seated in the actuator.

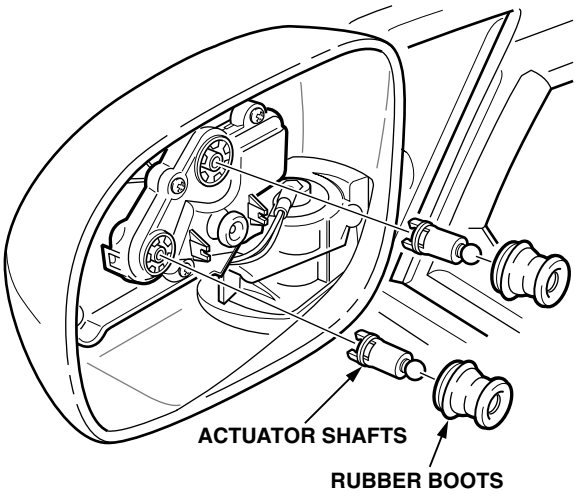

3. Before installing the new mirror:
   - Make sure the tabs on the actuator shafts are lined up with the slots on the back of the mirror.
   - Apply silicone grease to the mirror pivot and the actuator shafts.

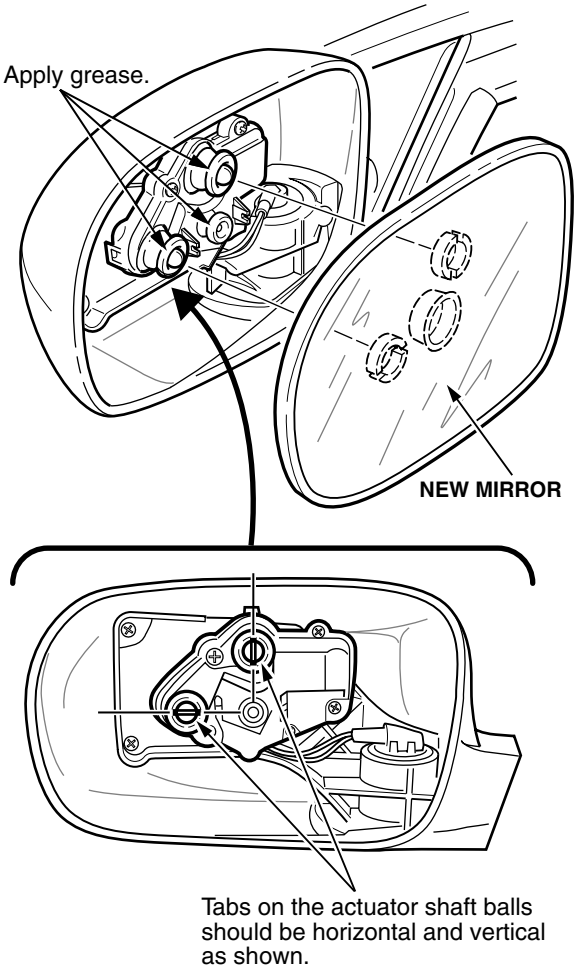

4. Align the pivot and the actuator shafts with the mirror, then carefully push on the mirror until the pivot and the actuator shafts are properly seated. If the pivot and the actuator shafts will not engage, warm the shafts and the pivot with a heat gun.
5. Clean the mirror with glass cleaner.
6. Check the operation of the power mirror actuator in all four directions.
7. Test-drive the vehicle to verify the mirror does not vibrate.